


# TIMERS

YOU MAY HAVE A TIMER AS PART OF YOUR GATE SYSTEM  
BELOW ARE SOME SIMPLE INSTRUCTIONS FOR THE MOST  
COMMON CHANGES

FIRST YOU WILL NEED TO REMOVE THE CLEAR PLASTIC COVER  
WHICH JUST PULLS OFF THE FRONT

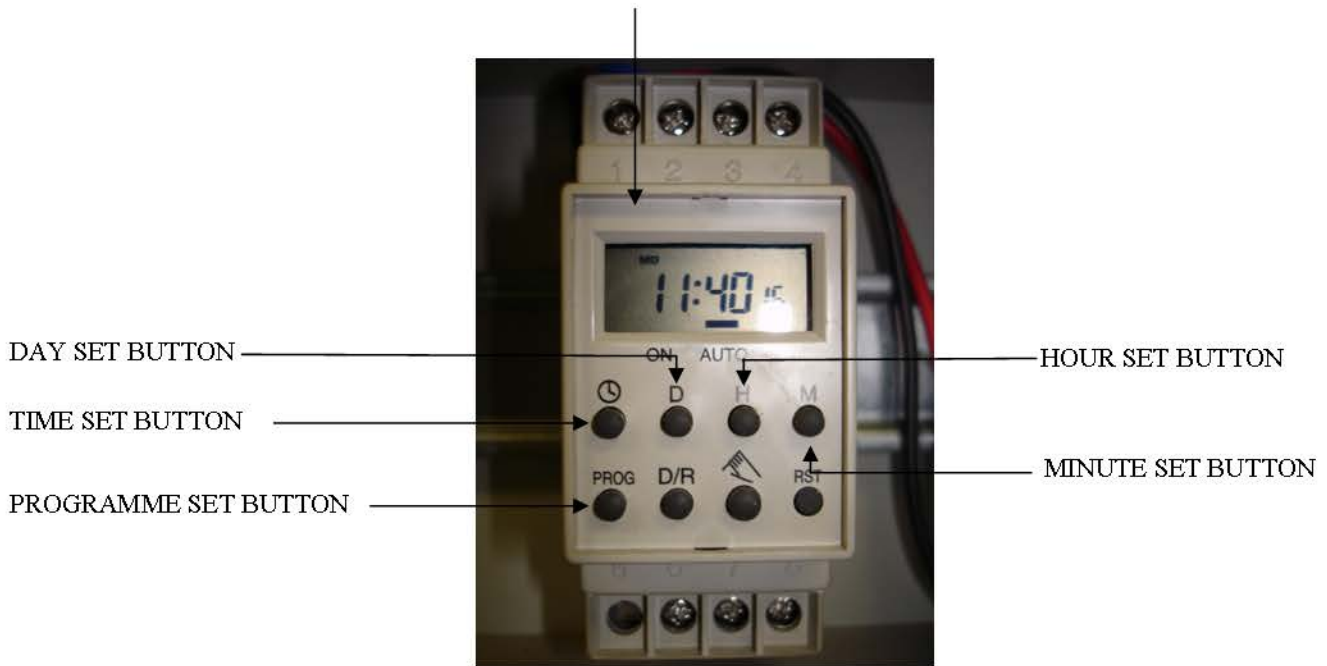

## TO MOVE THE TIME ON OR BACK ONE HOUR

PRESS THE TIME SET BUTTON AND HOLD WHILST PRESSING THE  
HOUR SET BUTTON UNTIL THE DESIRED TIME IS SET

## TO CHANGE THE PROGRAMME TIMES

PRESS THE PROGRAMME BUTTON TO FIND THE PROGRAMME  
YOU WISH TO CHANGE, THEN USE THE HOUR, MINUTE & DAY  
SET BUTTONS TO MAKE CHANGES. TO RETURN TO CLOCK,  
PRESS AND RELEASE TIME SET BUTTON.